

Airwell

User manual RCW31 EN



24.AW.RCW31.UM.EN.23.02

Read this manual carefully before using the product, and keep it for future reference.

All the pictures in this manual are for illustration purposes only.

The screen of the wired controller is with seven touch keys instead of a touchscreen.

Contents

1.	GENERAL SAFTY PRECAUTIONS	5
1.1.	Safety Signs	5
1.2.	Notice to users.....	6
2.	USER INTERFACE.....	8
2.1.	Names and functions.....	8
2.2.	Interface switch.....	9
2.3.	Interface layout	10
3.	BASIC OPERATIONS.....	18
3.1.	Screen Lock/Unlock.....	18
3.2.	Unit ON/OFF	18
3.3.	Temperature Settings	18
3.4.	Mode Change	19
4.	OTHER FUNCTIONS AND SETTINGS.....	21

1. GENERAL SAFTY PRECAUTIONS

- This document is applicable only to the wired controller. Read this document and follow the instructions carefully before operating the wired controller.
- Always observe all the operating instructions.
- Hand these instructions and all other applicable documents to the end user.

WARNING

Follow the safety precautions in the INSTALLATION MANUAL for the correct use of the heat pump unit.

1.1. Safety Signs

Action-related warnings in the document:

WARNING

It indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.

NOTE

Additional information.

1.2. Notice to users

If you are not sure how to operate the unit, contact your installer.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge provided that they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and maintenance shall not be made by children without supervision.



The unit is marked with the following symbol:

This means that electrical and electronic products may not be mixed with unsorted household waste. Do not try to dismantle the system yourself. The dismantling of the system and the treatment of the refrigerant, oil and other parts must be done by an authorized installer and must comply with applicable legislation.

The unit must be treated at a specialized treatment facility for reuse, recycling and recovery. By ensuring this product is disposed of correctly, you will help to prevent potential negative consequences for the environment and human health. For more information, contact your installer or local authority.

Working conditions of the wired controller.

Input voltage	18V DC
Operating temperature	-10 to 43°C
Humidity	≤RH90%

WARNING AND TROUBLESHOOTING OF NETWORKING

When connecting the product to a network, please keep the product as close to your phone as possible.

- At present, the product only supports 2.4 GHz band routers.
- Special characters, such as punctuation and space, are not recommended as a part of the WLAN name.
- The number of devices connecting to the same router should not exceed 10. Otherwise, the devices may be disconnected due to unstable signals.
- If the password of the router or WLAN is changed, clear all settings and reset the appliance.
- The contents of APP might change in version updates and actual operation shall prevail.


WIFI information :

WIFI transmission frequency range: 2.400~2.4835 GHz

EIRP ≤ 20 dBm

2. USER INTERFACE


2.1. Names and functions

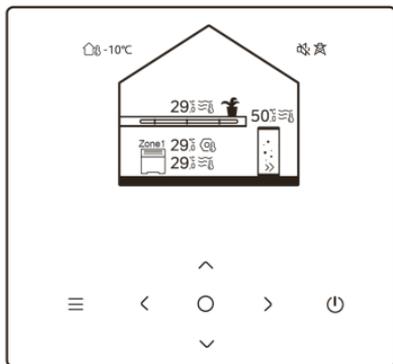

Icon	Name	Definition
☰	Menu/Return*	Press to access the menu page (from the home page) / return to the previous page (from a page other than the home page)
○	Confirm	Confirm a selection / Save settings / Access the next page
⏻	ON/OFF	Turn on/off zone 1/zone 2/DHW Press and hold for 3 seconds to turn on/off all appliances (zone 1 / zone 2 / DHW).
^ v < >	Navigation: upward, downward leftward, rightward	Press to navigate the cursor to adjust settings (holding it for 1 second can start quick adjustment)

* Hold for 2 seconds to return to the main page

2.2. Interface switch

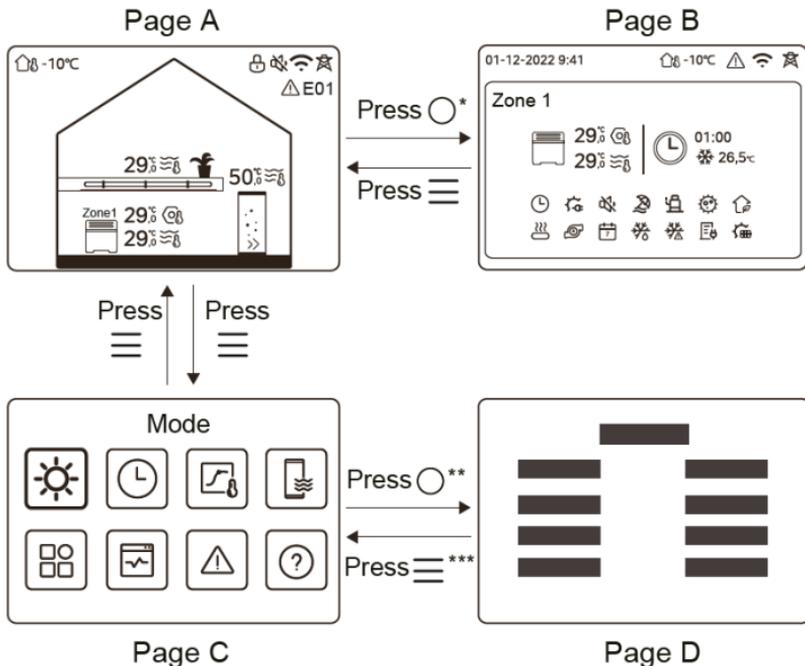


* To switch from Page A to Page B, select an appliance first.

** To switch from Page C to Page D, select a target icon first.

*** To switch from Page D to Page C, press several times (depending on the page level).

2.3. Interface layout

Page A – Home page

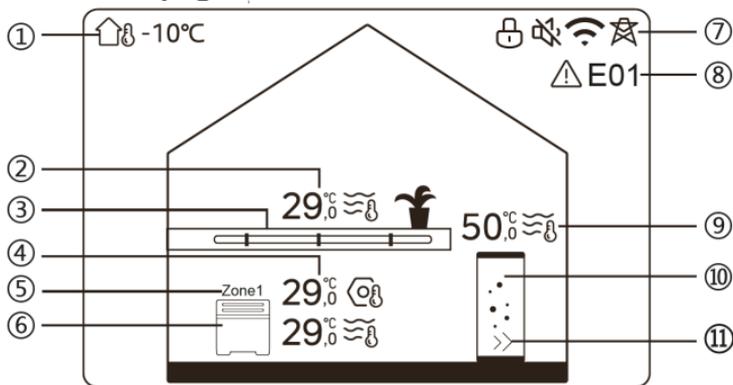

N°	Name	Icon	Note
1	Outdoor ambient temperature	-10°C	Current outdoor ambient temperature
2	Zone 2 temperature	Temperature	29°C
		Current room temperature	
		Current water temperature	
		Set temperature	
			<p>The indicator lights up when Zone 2 is ON and turns gray when Zone 2 is OFF. When the temperature is controlled by is displayed.</p> <p>When the temperature is controlled by water is displayed.</p>


3	Zone 2 appliances	Radiator		<p>Displays is depending on the installer setting.</p> <p>The icon color is orange when Zone 2 is in heating mode.</p> <p>The icon color is blue when Zone 2 is in cooling mode.</p> <p>The icon color is gray when Zone 2 is OFF.</p>
		Underfloor heating		
		Fan coil unit		
4	Zone 1 temperature	Temperature		<p>The indicator lights up when Zone 1 is ON and turns gray when Zone 1 is OFF. When the temperature is controlled by</p> <p>room temperature,  is displayed.</p> <p>When the temperature is controlled by water</p> <p>temperature,  is displayed.</p>
		Current room temperature		
		Current water temperature		
		Set temperature		
5	Zone 1 indicator	Zone 1	Indicates this zone is Zone 1.	
6	Zone 1 appliances	Radiator		<p>Displays is depending on the installer setting.</p> <p>The icon color is orange when Zone 2 is in heating mode.</p> <p>The icon color is blue when Zone 2 is in cooling mode.</p> <p>The icon color is gray when Zone 2 is OFF.</p>
		Underfloor heating		
		Fan coil unit		

7	Lock			Visible when the screen is locked
	Silent mode			Visible when the silent mode is active.
	WLAN connection			Visible during connecting and after successful connection.
	Smart grid			Visible when smart grid function is active
8	Error		 E01	Visible when any error exists.
9**	DHW tank temperature	Temperature	 50,0 °C	The indicator lights up when DHW is ON and turns gray when DHW is OFF. When DHW is selected, set temperature is visible.
		Current water temperature		
		Set temperature		
10**	DHW tank			The icon color is orange when DHW heating is ON. The icon color is gray when DHW heating is OFF.
11**	Fast DHW			Visible when fast DHW is active.

* Invisible if DOUBLE ZONE is disabled.

** Invisible if DHW MODE is disabled.

Page B – Appliance page

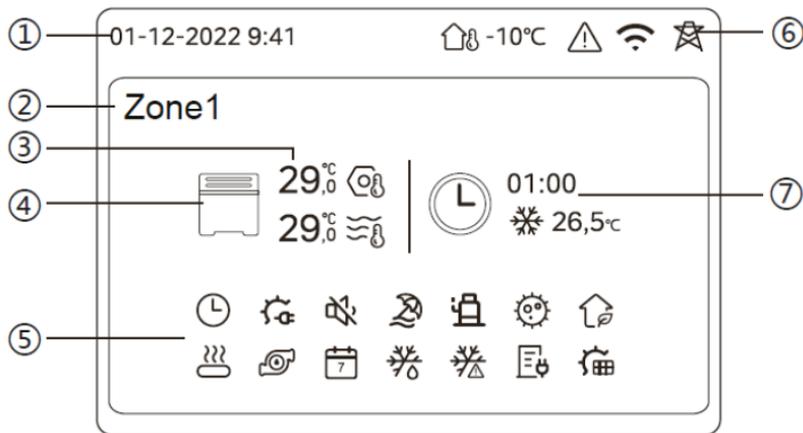


N°	Name	Icon	Note
1	Date	01-12-2022	Current date (DD-MM-YYYY) and time (HH:MM) of the wired controller.
	Time	9:41	
2	Zone indicator	Zone 1	Display 1 or 2 depending on the zone you have selected.
3	Temperature	29,0 ^{°C} 29,0 ^{°C}	When the temperature is controlled by room temperature,  is displayed. When the temperature is controlled by water
	Current room temperature		
	Current water temperature		

	Set temperature		temperature,  is displayed.	
4	Appliance	Radiator		Displays is depending on the installer setting. The icon color is orange when the selected appliance is in heating mode.
		Underfloor heating		The icon color is blue when the selected appliance is in cooling mode.
		Fan coil unit		The icon color is gray when the selected appliance is OFF.
5	Electric heater		Visible if any electric heater is active.	
	Daily timer		Visible if the daily timer is active.	
	Silent mode		Visible when silent mode is active.	
	Holiday mode		Visible when holiday mode is active.	
	Compressor		Visible when the compressor is running.	
	Water pump		Visible when the integrated water pump is running.	
	Energy saving mode		Visible when ECO mode is active.	
	Anti-freeze		Visible when anti-freeze function is active.	
	Defrost		Visible when defrost function is active.	
Additional heat source		Visible when additional heat source is active.		


	Mains electricity			Visible when smart grid function is active and the input signal is mains electricity.
	Peak electricity			Visible when smart grid function is active and the input signal is electricity at peak.
	Green electricity			Visible when smart grid function is active and the input signal is electricity for free.
	Solar			Visible when solar heating function is active.
	Disinfection			Visible when disinfection function is active.
	Weekly timer			Visible when the weekly timer is active.
6	Outdoor ambient temperature			Current outdoor ambient temperature.
	Error			Visible when any error exists.
	WLAN connection			Visible during connecting and after successful connection.
	Smart grid			Visible when smart grid function is active
7	Timer indicator	Time icon		Displays the recent timer information (for Schedule timer only). When no timer is active, "---" is displayed.
		Timer	01:00	
		Set operation mode of the timer		
		Set temperature of the timer	26,5°C	

Page C – Menu page

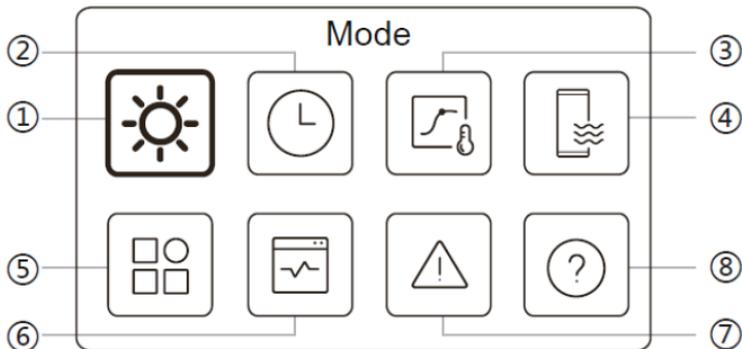

N°	Name	Icon	Note
1	Mode		Set the unit operation mode.
2	Schedule		The system operates according to a schedule.
3	Weather temperature		Allow to regulate the water temperature depending on the outdoor ambient temperature.
4	DHW		Settings of DHW.
5	Settings		General settings.
6	Unit status		More information of the unit and its operation status.
7	Error info		Error history.
8	FAQ		Assistance for common questions.

Page D – Setting and information page

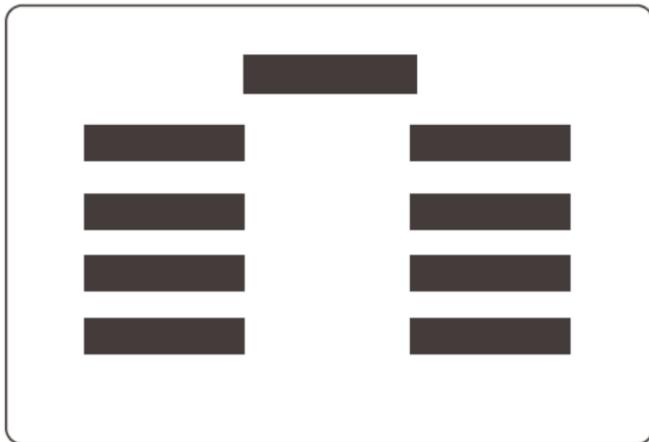

The page layout varies with your selection. It is either the setting page in which the parameters can be adjusted, or the information page which only provides additional information.

3. BASIC OPERATIONS

3.1. Screen Lock/Unlock

The screen dims 30 seconds after no operation, and then turns dark in 10 seconds.

To lock or unlock the screen, hold < and > simultaneously for 1.5 seconds.

3.2. Unit ON/OFF

Select an appliance (icon 3, 6, or 10) in Page A, and press  to turn ON/OFF the selected appliance.


Appliance color on the wired controller	Appliance status
Dark gray	OFF
Light orange	ON (heating mode)
Light blue	ON (cooling mode)

3.3. Temperature Settings


Select an appliance, and press **▲** and **▼** to adjust the set temperature.

Set temperature adjustment is feasible regardless of the appliance status.

3.4. Mode Change

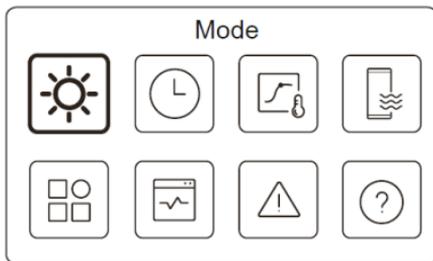

Access icon 1 in Page C to change the operation mode.

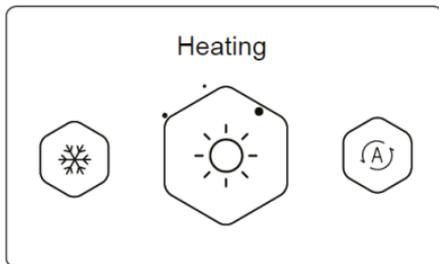




Press < or > to change the operation mode.
Three modes are optional: Heating, Cooling, and Auto.

NOTE

About AUTO mode:

The unit selects the operation mode automatically based on the outdoor ambient temperature and some advanced settings of the installer.

You can see the interfaces as below when the unit is running in different modes.

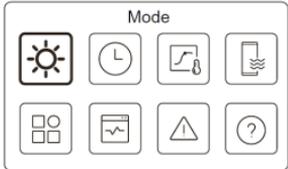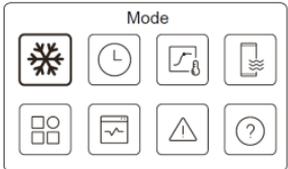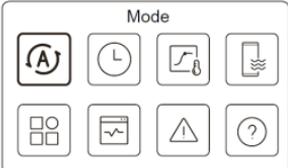Heating	 <p>The interface for Heating mode shows a 2x4 grid of icons. The top row contains: a sun icon (highlighted), a clock icon, a fan icon, and a smartphone icon. The bottom row contains: a square icon, a waveform icon, a triangle icon, and a question mark icon. The word "Mode" is centered above the grid.</p>
Cooling	 <p>The interface for Cooling mode shows a 2x4 grid of icons. The top row contains: a snowflake icon (highlighted), a clock icon, a fan icon, and a smartphone icon. The bottom row contains: a square icon, a waveform icon, a triangle icon, and a question mark icon. The word "Mode" is centered above the grid.</p>
Auto	 <p>The interface for Auto mode shows a 2x4 grid of icons. The top row contains: a circled 'A' icon (highlighted), a clock icon, a fan icon, and a smartphone icon. The bottom row contains: a square icon, a waveform icon, a triangle icon, and a question mark icon. The word "Mode" is centered above the grid.</p>

4. OTHER FUNCTIONS AND SETTINGS


The settings and operation guide of icons 2, 3, 4, 5, 6, 7, and 8 in Page C are shown below.

NOTE

The icon below is the status indicator.

 means inactive,  and means active.

4.1. Schedule

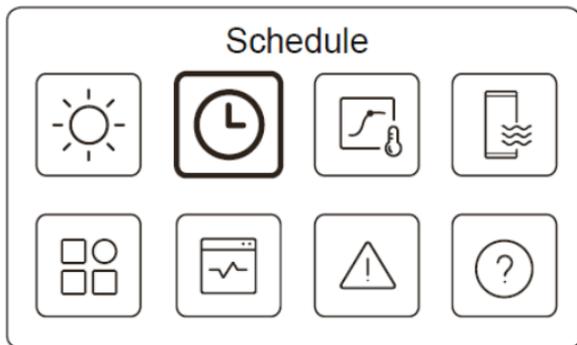

You can make schedules for the unit operation.

Schedule

Zone1 daily timer	ON >
-------------------	------

Zone2 daily timer	ON >
-------------------	------

DHW daily timer	OFF >
-----------------	-------

Zone1 weekly schedule	ON >
-----------------------	------

Schedule

Zone 2 weekly schedule	ON >
------------------------	------

DHW weekly schedule	ON >
---------------------	------

Holiday away	OFF >
--------------	-------

Holiday home	ON >
--------------	------

The status indicator on the right of the interface shows “ON” when the schedule is active, and “OFF” when the schedule is inactive.

NOTE

*You might see less items than what is illustrated above.
The number of visible items depends on your actual application.
This function is based on the current time displayed on the wired controller. Make sure the time is correct.*

Zone 1 daily timer

For daily schedule for Zone 1, 4 parameters can be set. Up to 6 commands can be set.

Zone 1 daily timer				
No.	Time	Mode	Temp.	
01	01:00	☀️	26°C	<input checked="" type="checkbox"/>
02	20:00	☀️	26°C	<input checked="" type="checkbox"/>
03	00:30	OFF	0°C	<input type="checkbox"/>
04	00:30	☀️	26°C	<input type="checkbox"/>

Time	The time when the unit starts to execute the following command.
Mode	The mode in which the unit starts to run from the set time. OFF means Zone 1 turns off at the set time.
Temp	The target temperature of the unit in the set mode.
Status	The status of the schedule setting. If no timer is active, Zone 1 daily timer is inactive.

NOTE

Daily schedule: The commands repeat every day.

Zone 2 daily timer

Daily schedule for Zone 2. Refer to Zone 1 daily timer.

This item is invisible if DOUBLE ZONE is disabled.

DHW daily timer

Daily schedule for DHW heating. Refer to Zone 1 daily timer.

This item is invisible if DHW MODE is disabled.

Zone 1 weekly schedule


Weekly schedule for Zone 1. Up to 4 schedules can be set.

Zone 1 weekly schedule


Schedule 1	ON >
Schedule 2	ON >
Schedule 3	OFF >
Schedule 4	ON >

NOTE

Weekly schedule: The commands repeats every week.

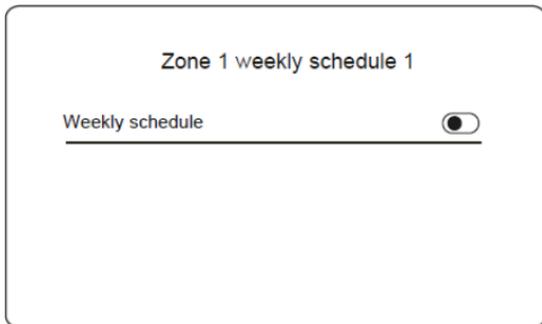

Press and you can see the interface below.

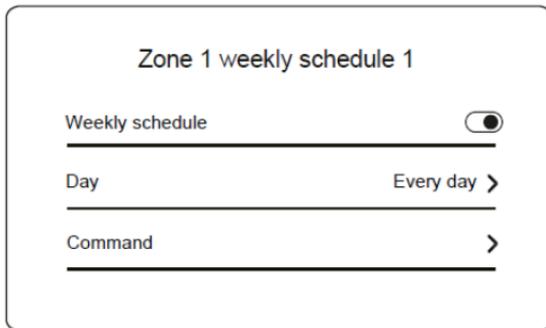

Day:

Zone 1 weekly schedule

Sunday	<input checked="" type="checkbox"/>
Monday	<input type="checkbox"/>
Tuesday	<input type="checkbox"/>
Wednesday	<input type="checkbox"/>

Command:

Zone 1 weekly schedule 1

No.	Time	Mode	Temp.	
01	01:00		26,5°C	<input checked="" type="checkbox"/>
02	20:00		26,5°C	<input checked="" type="checkbox"/>
03	00:30		26,5°C	<input checked="" type="checkbox"/>
04	00:30		26,5°C	<input checked="" type="checkbox"/>

Weekly schedule	Indicates the status of the weekly schedule.
Day	The day on which the following command is active within a week. At least one day should be selected.
Command	Refer to Zone 1 daily timer.

Zone 2 weekly schedule


Weekly schedule for Zone 2. Refer to Zone 1 weekly schedule. This item is invisible if DOUBLE ZONE is disabled.

DHW weekly schedule

Weekly schedule for DHW heating. Refer to Zone 1 weekly Schedule and DHW daily timer. This item is invisible if DHW MODE is disabled.

Holiday away

Schedule for holiday, providing a mild temperature for the residence to prevent freezing.

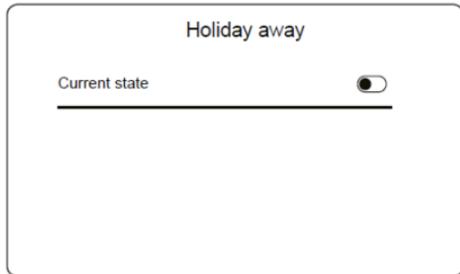

Press  and you can see the interface below.

Holiday away

Current state

From 15-08-2022

Until 17-09-2022

Heating mode

Holiday away

DHW Mode

Disinfect

Current Status	Indicates the status of Holiday away mode.
From	The day on which Holiday away mode starts (00:00 on that day).
Until	The day on which Holiday away mode ends (24:00 on that day).

Heating Mode*	Indicates the status of heating mode.
Heating Temp.*	The target temperature of the unit in heating mode.
DHW Mode**	Indicates the status of DHW heating mode.
DHW Temp.**	The target temperature of the unit in DHW heating mode.
Disinfect***	Indicates the status of disinfect function.

* Invisible if Heating mode is inactive.

** Invisible if DHW mode is inactive.

*** Invisible if DHW mode or disinfection is inactive.

NOTE

*You might see less items than what is illustrated above.
The number of visible items depends on your actual application.*


Quit Holiday away mode in advance:

When Holiday away mode is active, press any button on the wired controller. Then, a confirmation page appears.


For more information, see FAQ.

Holiday home

In case that user stays at home for holiday, user can make customized schedule.

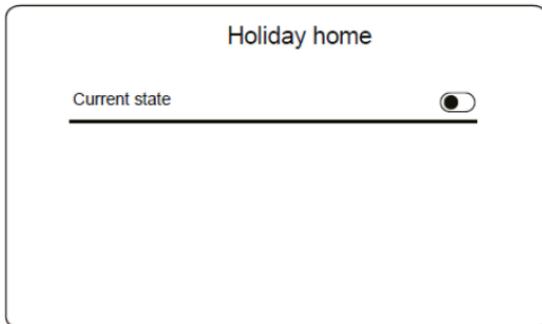

Press  and you can see the interface below.

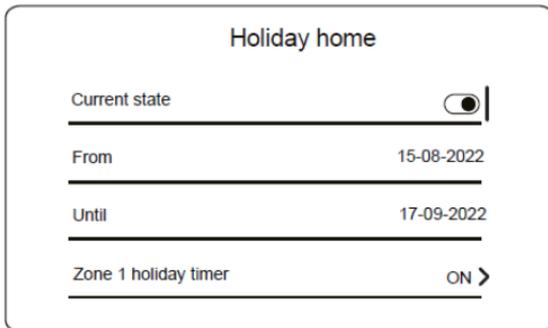

Holiday home

Zone 2 holiday timer ON >

DHW holiday timer ON >|

Current Status	Indicates the status of Holiday home mode.
From*	The day on which Holiday home mode starts (00:00 on that day)
Until*	The day on which Holiday home mode ends (24:00 on that day)
Zone 1 holiday timer*	Zone 1 holiday timer.
Zone 2 holiday timer*	Zone 2 holiday timer.
DHW holiday timer*	DHW holiday timer.

* Invisible if Holiday home mode is inactive.

NOTE


You might see less items than what is illustrated above. The number of visible items depends on your actual application.

Quit Holiday home mode in advance:

When Holiday home mode is active, press any key on the wired controller. Then, a confirmation page appears.

For more information, see FAQ.

4.2. Weather Temperature

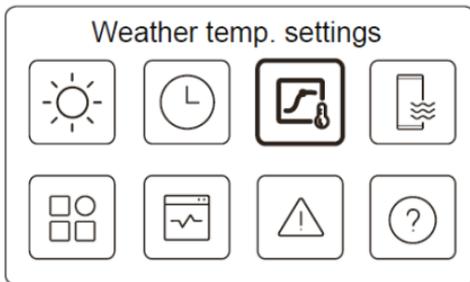

The set water temperature is regulated automatically depending on the outdoor ambient temperature.

This function is only for space heating and space cooling.

When the function is active, the unit will apply temperature curves if the current operation mode is consistent with the activated function.

Weather temp. settings

Weather temp. settings introduction >

Zone 1 heating mode ON >

Zone 1 cooling mode OFF >

Zone 2 heating mode OFF >

Weather temp. settings

Zone 2 cooling mode OFF >

The status indicator on the right of the interface shows “ON” when the setting is active, and “OFF” when the setting is inactive.

NOTE


If the temperature is controlled by water temperature, you cannot adjust the set temperature (in home page) manually once this function is enabled.

If the temperature is controlled by room temperature, the set temperature (in home page) can be adjust as usual.

This function is invalid if the unit is in holiday away or holiday home mode, and the function turns to valid automatically (if this function is set to be active) when the unit quits holiday away or holiday home mode.

Zone 1 heating mode

Heating temperature curve setting for Zone 1.

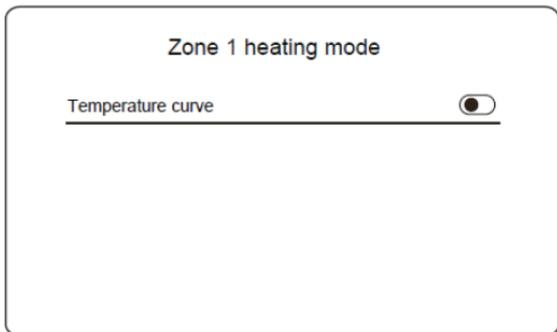

Press and you can see the interface below.

Zone 1 heating mode

Temperature curve

Temperature curve type Standard

Temperature level 4

Temperature offset 0°C

Temperature curve	Indicates the status of temperature curve function.
Temperature curve type*	Select which curve type you want to apply. Three types in all: Standard, ECO, Custom Standard: Curves preset by manufacturer, mainly for common conditions ECO: Curves preset by manufacturer, for energy saving Custom: The parameters of the curve can be adjusted, mainly for advanced users.
Standard	
Temperature level*	Up to 8 curves preset by manufacturer, from which you can choose one.
Temperature offset*	Fine tune the curve. Slightly increase or decrease the temperature of the curve.

ECO**	
Temperature level*	Up to 8 curves preset by manufacturer, from which you can choose one.
ECO timer*	<p>ECO timer: Indicates the status of ECO timer.</p> <ul style="list-style-type: none">• If the ECO timer is inactive, the unit will operate in ECO mode all the way.• If the ECO timer is active, the unit will operate in ECO mode only during the set time period. <p>Start: the hour from which the ECO curve is enabled; End: the hour from which the ECO curve is disabled</p> <ul style="list-style-type: none">• If the set Start time is later than the set End time, the unit will operate in ECO mode throughout a day. The Start time and End time cannot be set to the same value. Otherwise, the most recent setting is invalid, and a notice window appears.
Custom	
Temperature setting*	The parameters of the curve can be adjusted.
Temperature offset*	Fine tune the curve. Slightly increase or decrease the temperature of the curve.

* Invisible if Temperature curve function is inactive.

** Available only for Zone 1 heating mode and single zone application.

Zone 1 cooling mode

Cooling temperature curve setting for Zone 1.

Refer to Zone 1 heating mode.

Zone 2 heating mode

Heating temperature curve setting for Zone 2.

Refer to Zone 1 heating mode.

NOTE

Invisible if DOUBLE ZONE is disabled.

Zone 2 cooling mode

Cooling temperature curve setting for Zone 2.

Refer to Zone 2 heating mode.

NOTE


Invisible if DOUBLE ZONE is disabled.

Introduction to weather temp. settings

It provides some basic knowledge about the temperature curve.

For more information, see FAQ.


4.3. DHW

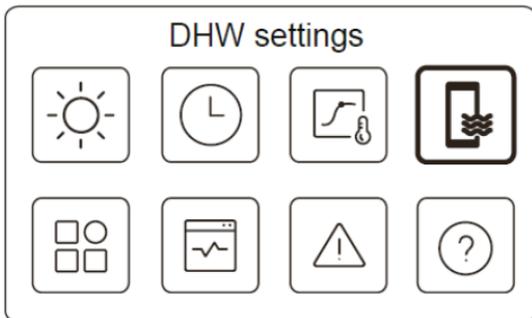

NOTE

Invisible if DHW MODE is disabled.


The status indicator on the right of the interface shows “ON” when the setting is active, and “OFF” when the setting is inactive.

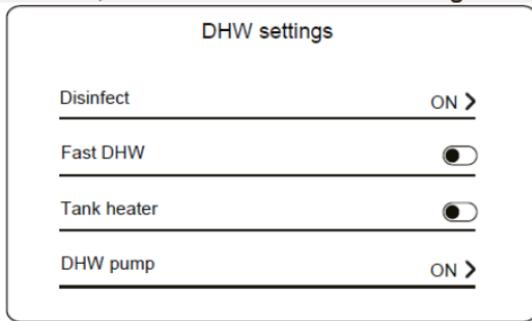


Disinfect	Kill Legionella at high temperature.
Current state	Indicates the status of Disinfect function.
Operate day	The day on which Disinfect function is active within a week. At least one day should be selected.
Start	The hour when Disinfect function starts.
Fast DHW*	Indicates the status of Fast DHW function. -Fast DHW function forces the unit to run in DHW mode (the unit will switch to DHW mode immediately). -Fast DHW serves to activate auxiliary heat sources such as TBH, AHS, and IBH for DHW heating.
Tank heater*	Indicates the status of Tank heater function. -Tank heater function serves to activate TBH.
DHW pump	Daily schedule for DHW pumps -Up to 12 commands can be set. The operation time of DHW pumps for each command is 5 minutes.

* The status indicator will turn OFF automatically after the function ends.


Disinfect

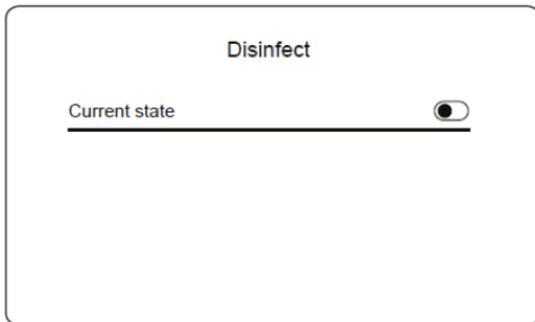


Press  and you can see the interface below.

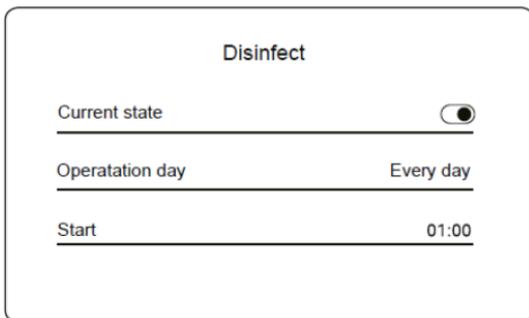

DHW pump

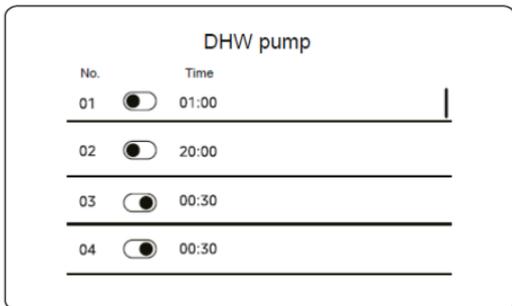

4.4. Settings

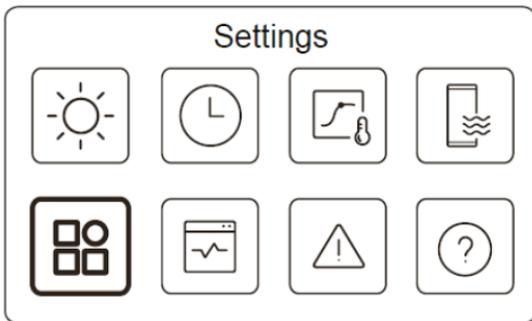

The status indicator on the right of the interface shows “ON” when the setting is active, and “OFF” when the setting is inactive.

Settings

Silent Mode ON >

Backup Heater

Display Setting >


WLAN Setting >

Settings


Force defrost

Silent mode

In Silent mode, the unit operates without producing much noise.

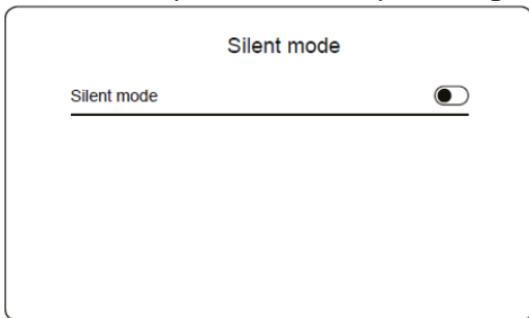

Press  and you can see the interface below.

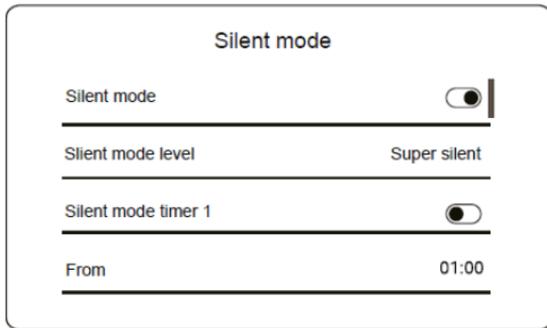

Silent mode

Until 12:00

Silent mode timer 2

From 01:00


Until 06:00

Silent mode	Indicates the status of Silent Mode.
Silent mode level	The level you want to use: (1)Silent; (2) Super silent.
Silent mode timer 1	Indicates the status of Silent mode timer 1.
Start	The time when Silent mode timer 1 starts.
End	The time when Silent mode timer 1 stops.
Silent mode timer 2	Indicates the status of Silent mode timer 2.
Start	The time when Silent mode timer 2 starts.
End	The time when Silent mode timer 2 stops.

- When silent mode is active while the silent mode timer is inactive, the unit runs in silent mode all the time. When silent mode is active and the silent mode timer is also active, the unit runs in silent mode only in the set time period.
 - If the set Start time is later than the set End time, the unit will operate in Silent mode throughout a day. The Start time and End time cannot be set to the same value. Otherwise, the most recent setting is invalid, and a notice window appears.

Backup Heater

- Invisible when IBH/AHS function is disabled. The status indicator will turn OFF automatically after the function if off.

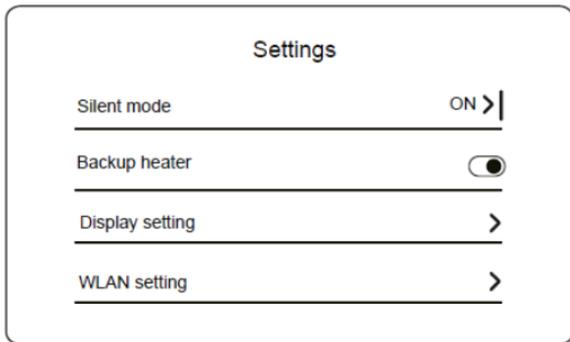

Display Setting

Display Setting


Time	12:30
Date	15-08-2022
Language	English >
Backlight	>

Display Setting

Buzzer	<input type="checkbox"/>
Screen Lock	>
Screen lock time	120 S

Time	Set the current time of HMI.
Date	Set the current date of HMI.
Language	Set the language of HMI.
Backlight	Set the backlight brightness.
Buzzer	Indicates the status of Buzzer.
Screen Lock	Reminds user how to lock and unlock the screen.
Screen Lock Time	Set the automatic screen lock timer.

WLAN Setting

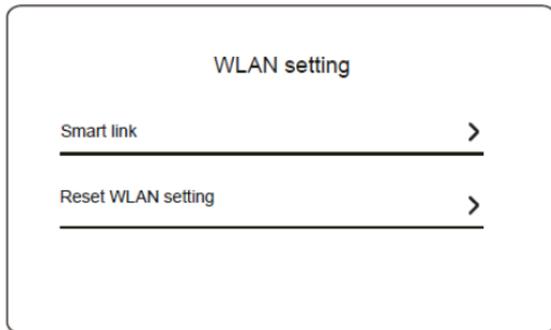


Smart Link	Jump to a new page, which contains the SN code of the wired controller. -Every time you enter the Smart Link screen, the WLAN connection is activated for 5 minutes. -With the WLAN connection activated, connect to the unit through the app. Refer to the instructions of the app for more information.
Reset WLAN setting	A page for confirmation appears. -If you confirm the reset, the unit will disconnect with the app. If you want to use the app to operate the unit, connect the unit with the WLAN again.

Force Defrost

Current State: Indicates the status of Force Defrost.

- The status indicator will turn OFF automatically after Force Defrost ends.

4.5. Unit Status

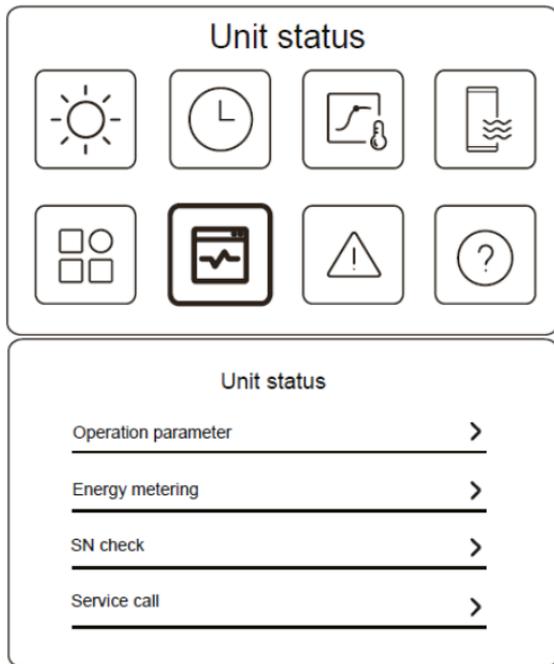

<p>Operation parameter</p>	<p>A list of parameters related to the units (both master units and slave units). You can check the current status of each parameter. Press < or > to switch the unit. -Ask your installer for more information of each parameter.</p>
<p>Energy metering</p>	<p>You can check the produced energy, consumed power and efficiency of the unit for every type. Three types in all: -Heating energy data* -Cooling energy data* -DHW energy data* Two functions: -Energy data: you can check the hourly, daily, weekly, monthly, or yearly data or total data. -Historical data: you can check the historical data.</p>
<p>SN check</p>	<p>The SN code of the wired controller, outdoor unit or indoor unit (if applicable). You can check both the master units and slave units. Press < or > to switch the unit (master units and slave units).</p>
<p>Service call</p>	<p>The phone number of your installer or dealer.</p>

* Visible with --- displayed, if the function is disabled accordingly.

Operating parameter

Operation parameter			
Unit	NO.		
#00	1	Online unit number	1
#00	2	ODU model	5KW
#00	3	Operation mode	Heating
#00	4	Operation status	ON

Energy metering

Energy metering	
Heating energy data	>
Cooling energy data	>
DHW energy data	>

Heating energy data

Energy data >

Historical data >

Energy data


Heat energy: Hour

Production	8,5 kW
RE production	6,5 kw
Consumption	2,5 kW
COP	3,40

Historical data:

Heating energy	
Total ↕	2021 <>
Production	6000 kwh
RE production	3455 kWh
Consumption	1456 kWh
COP	4,12

4.6. Error Info

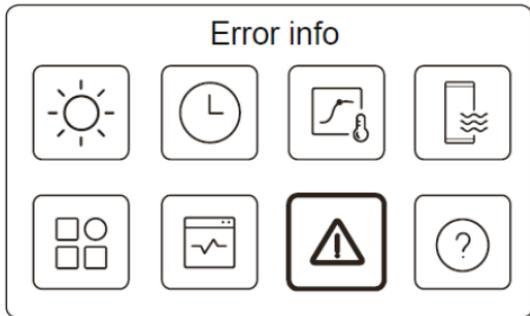

Access icon 7 in page C. Then, unit errors (if any) are displayed.


Error info.				
Unit	Code	Time	Date	
#00	E8 (70%)	11:27	19-12-2022	
#02	E0 (50%)	15:30	19-12-2022	
#01	E2	10:30	02-12-2022	
#00	E8 (70%)	11:27	25-10-2022	

You can press at each record to check the definition of the error code.


Error info.				
Unit	Code	Time	Date	
#01	E1	11:27	19-12-2022	

Water flow fault

4.7. FAQ

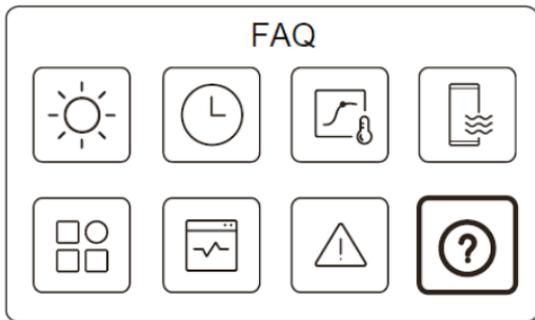

Access icon 8 in page C. Then, a QR code is displayed.

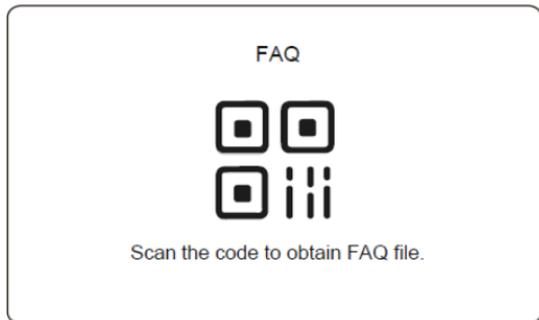

Scan the QR code for more details about the wired controller.

5. INSTALLATION CONFIGURATION

To be filled in by the installer

Date			Unit
Code	Setting		
DHW setting			
DHW mode			/
Disinfect			/
DHW priority			/
Pump_D			/
DHW priority time set			°C
dT5_ON			°C
dT1S5			°C
T4DHWMAX			°C
T4DHWMIN			Minutes
t_INTERVAL_DHW			°C
T5S_DISINFECT			Minutes
t_DI_HIGHTEMP.			Minutes
t_DI_MAX			Minutes
t_DHWHP_RESTRICT			Minutes
t_DHWHP_MAX			/
PUMP_D TIMER			Minutes
PUMP_D RUNNING TIME			/
PUMP_D DISINFECT			/
ACS function			/

Cooling setting			
Cooling mode			/
t T4 FRESH C			Hour
T4CMAX			°C
T4CMIN			°C
dT1SC			°C
dTSC			°C
t INTERVAL C			Minutes
Zone 1 C-emission			/
Zone 2 C-emission			/
Heating setting			
Heating mode			/
t T4 FRESH H			Hours
T4HMAX			°C
T4HMIN			°C
dT1SH			°C
dTSH			°C
t INTERVAL H			Minutes
Zone 1 H-emission			/
Zone 2 H-emission			/
Force defrost			/
AUTO mode setting			
T4AUTOCMIN			°C
T4AUTOHMAX			°C
Temp. type setting			
WATER FLOW TEMP.			/

ROOM TEMP.			/
DOUBLE ZONE			/
Room thermostat setting			
ROOM THERMOSTAT			/
MODE SET PRIORITY			/
Other heat source			
IBH function			/
IBH locate			/
dT1 IBH ON			°C
t IBH DELAY			Minutes
T4 IBH ON			°C
P IBH1			kW
P IBH2			kW
AHS function			/
AHS PUMPI CONTROL			/
dT1 AHS ON			°C
t AHS DELAY			Minutes
T4 AHS ON			°C
EnSwitchPDC			/
GAS-COST			Price/m3
ELE-COST			Price/kWh
MAX-SETHEATER			°C
MIN-SETHEATER			°C
MAX-SIGHEATER			V
MIN-SIGHEATER			V
TBH FUNCTION			/

dT5_TBH_OFF			°C
t_TBH_DELAY			Minutes
T4_TBH_ON			°C
P_TBH			kW
Solar function			/
Solar control			/
Deltatsol			°C
Holiday away setting			
T1S_H.A_H			°C
T5S_H.A_DHW			°C
Special function			
Preheating for floor T1S			°C
t_ARSTH			Hours
t_Dryup			Days
t_Highpeak			Days
t_Drydown			Days
t_Drypeak			°C
Start time			h/min
Start date			dd/mm/yy
Preheating for floor			/
Floor drying up			/

AUTO RESTART			
AUTO RESTART COOLING/HEATING MODE			/
AUTO RESTART DHW MODE			/
POWER INPUT LIMITATION			
POWER INPUT LIMITATION			/
INPUT DEFINE			
M1 M2			/
SMART GRID			/
T1T2			/
TBT			/
P_X PORT			/
CASCADE SETTING			
PER_START			%
TIME_ADJUST			Minutes
ADDRESS RESET			/
HMI ADDRESS SETTING			
HMI SETTING			/
HMI ADDRESS FOR BMS			/
Stop BIT			/
Common setting			
t DELAY PUMP			Minutes
t1 ANTILOCK PUMP			Hours

t2_ANTILOCK PUMP RUN			Seconds
t1-ANTILOCK SV			Hours
t2-ANTILOCK SV RUN			Seconds
Ta-adj.			°C
F-PIPE LENGTH			/
PUMP_I SILENT OUTPUT			%
Energy metering			/
Pump_O			/

6. OPERATING PARAMETERS

N°	Code	Value		
	Date			
1	ODU model			
2	Operation mode			
3	Comp. frequency			
4	Fan speed			
5	Expansion valve			
6	Tp comp. discharge temp.			
7	Th comp. suction temp.			

8	T3 outdoor exchanger temp.			
9	T4 outdoor air temp.			
10	TF module temp.			
11	P1 comp. pressure			
12	P2 comp. pressure			
13	T2b plate F-in temp.			
14	T2 plate F-out temp.			
15	Tw_in plate water inlet temp.			
16	Tw_out plate water outlet temp.			
17	T1 leaving water temp.			
18	Tw2 circuit2 water temp.			
19	Ta room temp.			
20	T5 water tank temp.			
21	Tbt buffer tank temp.			
22	T1S_C1 CLI. Curve temp.			
23	T1S2_C2 CLI. Curve temp.			
24	Water pressure			
25	Water flow			
26	ODU current			

27	ODU voltage			
28	DC voltage			
29	DC current			
30	Pump_I PWM			



**GROUPE AIRWELL
10 RUE DU FORT DE SAINT CYR
78180 MONTIGNY LE BRETONNEUX
FRANCE**

www.airwell.com

24.AW.RCW31.UM.EN.23.02